ARIES WARRANTY

ARIES WARRANTY PROTECTS YOU TWO WAYS

FIRST: If you complete an ARIES Kit, followin our instructions, and it fails to perform accordin, to our published specifications, we will repair it for a handlin fee of \$15.00, or 10% of the kit price, whichever is greater.

SECOND: We will replace any compnent of an ARIES unit which becomes defective in normal service.

BOTH PROVISIONS ARE EFFECTIVE FOR 120 DAYS FROM DATE OF SHIPMENT.

WHAT YOU MUST DO:

FIRST: To validate the warranty, fill out and return the ARIES warranty card within 5 days of receipt of the equipment.

SECOND: Pack and wrap all returned equipment VERY CAREFULLY.

THIRD: Enclose the proper handling fee.

FOURTH: Return the package prepaid and insured to:

Service Department ARIES, Inc. 119 Foster Street Peabody, MA 01960

WHAT WE WILL DO:

ARIES will restore your kit to published specifications, charging only for components which, in our opinion, were damaged by the kit builder.

ARIES will return serviced equipment prepaid anywhere in the continental United States. Other areas will be billed shipping costs, or the package will be sent freight collect.

ATTENTION: We reserve the right not to honor warranty unless the proper solder is used in construction. This must be specifically electronic solder, ROSIN CORE FLUX ONLY. (NOT acid core.) We strongly recommend 60/40, and suggest #22 as a convenient size. In our labs, Ersin and Kester are the two brands used.

	VARRANTY C	AND		DDEL AR	
Shipment dat	te:	-	() Kit	() Wire	d
NAME:					
ADDRESS:_				,	
Where did yo	u learn of this p	oduct?			
Application:	() Home ()	Hobby (Ham Radio	() Commerci	al
	() Industrial	() O. E. M.			
Comments:					
Committee.					
Commonts.					

ARIES MUSIC SYNTHESIZER KIT---- SYSTEM 300

GENERAL ASSEMBLY INSTRUCTIONS

THE ARIES Music Synthesizer is both an extremely versatile musical instrument and a highly flexible research laboratory for experimentation with electronic sound production. It may also be used as an audio sweep frequency generator, waveform analyzer, and signal processor. In addition, it can modify external sounds.

The ARIES Music Synthesizer has functions found only in modular synthesizers costing many thousands of dollars, and is not limited by the fixed interconnections of lower cost instruments. Any one of our inputs and outputs may be connected to any other one, or more, resulting in literally billions of different connections. When you consider that even one set of interconnections (called "patches") can produce many different sounds, the total number of sounds available becomes astronomical. These sounds can be as different from each other as a saxophone is from a volcano.

The synthesizer consists of a cabinet with built-in power supply, a choice of up to ten modules (each providing a different function), and, if desired, a 5 octave dual-voice keyboard.

The ARIES Music Synthesizer performs with standards of accuracy, stability, and reliability equal to or better than those of any other synthesizer, regardless of cost. Yet, the synthesizer can be assembled from kits, either all together or one module at a time.

IMPORTANT! Read this manual THOROUGHLY! Assembly is not difficult and requires no knowledge of electronics or music, but every component and connection must be treated with care. Every step should be checked off (V) with a pencil.

Aries stands ready to assist you if you have any problem with assembly or operation. Simply write:

Customer Service ARIES, Inc. P O Box 808 Peabody, Ma 01960

Fully describe the difficulty and return any defective components. If the problem is simple (or you cannot be delayed by time consuming written correspondence), call 617-532-0450 during regular business hours for immediate assistance.

Our unique two-step warranty protects you if you cannot successfully complete this kit. Please read our complete warranty at the back of this manual.

The synthesizer modules each contain a number of miniature components to be soldered onto a printed circuit board. Although the components are heat resistant, a minimum of heat should be used to make the required connections. Accordingly, use only a small, low wattage, "pencil" type soldering iron; a 10 to 30 watt iron with a 1/32 or 1/16 inch tip is ideal. Use only 60/40 grade electrical solder with a non-corrosive rosin core flux. If you are not sure what kind of solder you have, don't take the chance. Solder is inexpensive, and use of the wrong type, such as acid core solder, or a paste flux, may severly damage the boards and components and void the warranty.

TOOLS A small pair of wire cutters, needle-nose pliers, wire strippers, and small and medium screwdrivers complete the list of tools you will need. These are standard electronic tools available at most supply houses.

 
INSTALLATION OF COMPONENTS The main assembly job consists of soldering several types of small parts, called components, onto a printed circuit board. Parts are carefully packed at our factory. However, if you find parts to be missing or damaged, please write our customer service office, describing the part carefully so that we can replace it. All parts will be installed on the blank side of the board with their leads extending through to the foil side. In attaching components to the board use the following procedure.

1. Bend the leads of the component to align them with the holes in the board.

2. Insert the component into the board, double checking to be sure the part is aligned properly with respect to polarity (if required) and to be certain it is correctly located.

3. Using a minimum of heat and solder, solder the component to the foil pads. Be sure the solder does not flow over onto an adjacent pad, as this could possibly result in damage when power is applied to the circuit.


4. Clip the excess leads off at the "peak" of the solder joint, and inspect the joint to be certain that it is "good" (rounded and shiny, flowing smoothly over the pad and the lead) and that no solder has run over onto nearby pads or leads.



PARTS ORIENTATION (POLARITY) IMPORTANT-Some parts must be installed in the proper direction, while others, such as resistors, do not matter. AN INCORRECTLY INSTALLED PART WILL NOT FUNCTION, MAY BURN OUT, AND MAY DESTROY OTHER PARTS! Here is a general outline for proper orientation. Refer to this section during assembly,

ORIENTATION-(cont)

 
1. Fixed Resistors







Resistors are not polarity sensitive- that is, they can be installed in either direction. However, for precision resistors which have the value number on them, mounting should be done so that the number is facing facing up , for purposes of checking.

  2. Disc(ceramic) Capacitors- also not polarity sensitive






 Mylar, paper, or polystyrene capacitors are not




polarity sensitive. However, if they have a band at one end, as in B above, it should be installed in the direction shown in the assembly drawing. If there is no band, as in A, it can be installed either way.

  4. ELECTROLYTIC OR POLAR CAPACITORS (also Polar Tantalum Capacitors)











 These must be installed correctly. The + sign near one lead indicates a polarity sensitive capacitor.





Diodes are polarized. Band indicates + end (cathode).

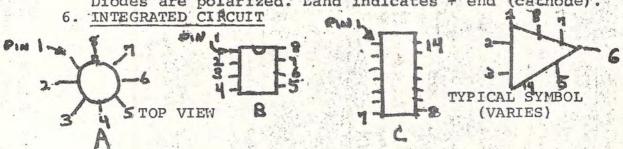



INTEGRATED CIRCUIT(cont.) Pins are numbered counterclockwise when viewed from above the case. Observe
tab (round case) or indentation (rectangular case).
The number of pins may vary, typically being 8, 14,
or 16. NOTICE! The name "Integrated Circuit" just
refers to any small package containing circuitry. They
may, however, be called by the name of their specific
function, as, for example, an "Operational Amplifier"
(op-amp for short), "Comparator", "And Gate", "Nor Gate",
etc. This need not be of any concern, however. Merely
check for the correct part number, for example, "LM301A"
or 74122, and be certain to install the pins (bend

30

7. TRANSISTORS Several types of semiconductor devices are used in some of the ARIES kits. Included here are transistors, dual transistors, field effect transistors (FET's) and dual FET's. Like integrated circuits, they are all polarity sensitive, and must be installed correctly. However, there are so many different types of pin configurations that each type of semiconductor used here must be pictured separately. NOTE: Integrated circuits and transistors are marked with part numbers Sometimes there are other numbers, too, usually for manufacturing information. Disregard any additional numbers or symbols. Example of Transistor Installation

 transistor type=TE3393




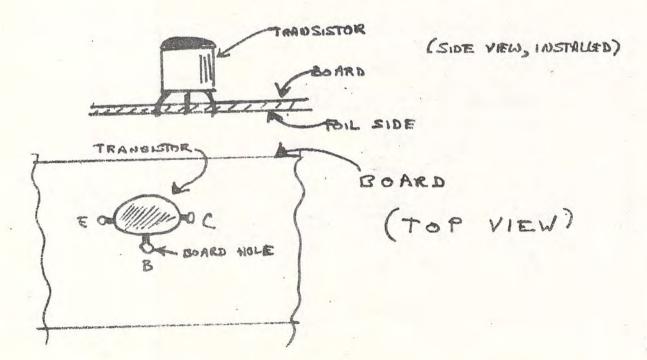



SEMICONDUCTOR BASING (PIN CONFIGURATIONS) COLLECTOR SYBBOLS PMP CUMMARKED METAL CAN OBSTITUTE) 2 N 3638 PLASTIC CASE BASE COLLECTOR NPN PLASTIC CASE TE 3393 2 N 3393 OUECTOR METAL CAN PNP DUAL 3347-1

EMITTER 2


SYSTEM 300 GENERAL ASSEMBLY

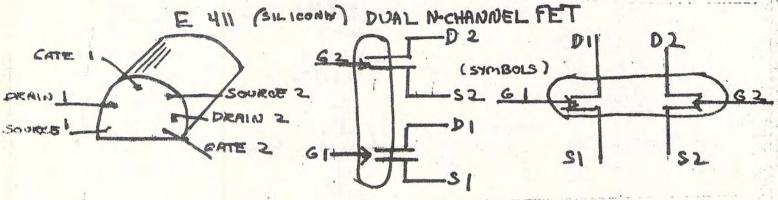

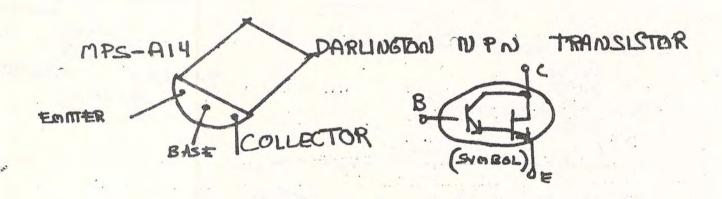

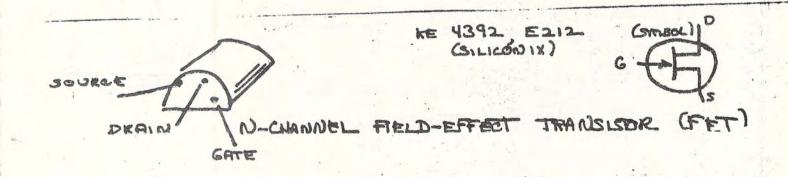

SYSTEM 300 GENERAL ASSEMBLY

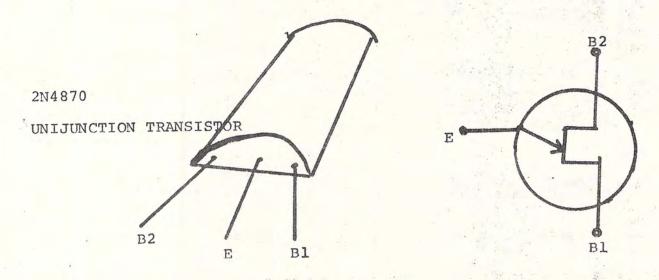

8. TRIMPOTS These are variable resistors mounted on the board. Mount as shown on assembly drawing

 
TOP VIEW

 
BOARD

 
CSW-BOL)

 
9. FRONT PANEL POTS These usually have 3 terminals which must be wired correctly. Refer to this numbering diagram.

ILLUSTRATIONS ON FOLLOWING PAGE









1...

Pin 1 is sometimes called CCW(counter clockwise) or low.


Pin 2 is sometimes called ARM or WIPER.

Pin 3 is sometimes called CW (clock wise), or high

10. FRONT PANEL SWITCHES There are many types of switches. The exact one used will be pictured in the Assembly Section, but here is an example.

DPDT (Double-Pole Double-Throw) Toggle Switch

2 0 90 1 3 0 3 5 0 90 4 0 6 (SIMBOL) Notice that if the switch is rotated upside down, Pin 1 now becomes Pin 6, because what matters is which pin is up and which is down. Therefore, switches like this should be fastened to the front panel before wiring so that the pins do not get mixed up.

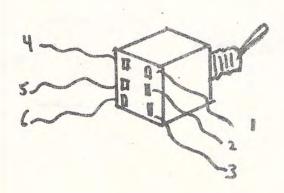


10. (cont.) Switches may also be mounted sideways. In that case, pin 1 is at the upper left (viewed from behind).

11. JACKS There are three kinds of jacks used in the

ARIES Synthesizer.

A) Minijacks-used for patching various modules together.
They have 3 terminals.

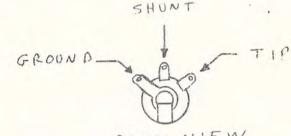


MINI- JACK



BACK VIEW.

 B) Phono (RCA) jacks-used for connecting the synthesizer output to an external amplifier. Used only on OUTPUT/ FOWER module.




C) Stereo Phone Jacks- Used only on OUFTET/POWER module for plugging in stereo headphones.

12. JUMPERS These are plain wires, used to connect two holes on the board together. THEY MUST BE INSULATED EXCEPT AT THE ENDS!

Jumpers are indicated by a "J" and a number.

NOTICE ANY PART NOT DESCRIBED IN THIS SECTION WILL BE SHOWN IN THE ASSEMBLY SECTION.

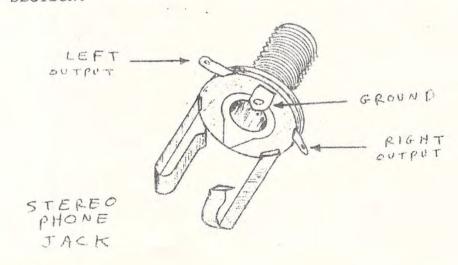

-.7 8 ...

COMPONENT IDENTIFICATION

I, RESISTORS Bands indicate resistance value. Band 1 is closer to the end than any other.

yellow violet red silver

EXAMPLE = 4700 ohms = 4:7 k ohms

Bands 1 and 2 indicate the first two digits of the resistance and band 3 is the multiplier. The fourth band provides the accuracy range (tolerance) of the value.

1		Band 1	Band 2	Band 3	Band 4
COLOR					
BLACK		0	0	1	18
BROWN		2	2	100	10
ORANGE YELLOW		3	4	1000	
GREEN BLUE		5	5 6	1,000,000	
VIOLET	•	7	7	10,000,000	
WHITE		9	9	1,000,000,000 mult. by .1	5%
GOLD SILVER				mult. by 0.01	10%

MORE EXAMPLES:

BROWN, BLACK, BLACK, BILVER=10 ,10% BROWN, GREEN, BROWN, BILVER=150 ,10% RED, VIOLET, ORANGE, GOLD=27K, 5% ORANGE, WHITE, GREEN, BROWN= 3.9M, 1% Some 1% resistors may not be color coded. The will either say the value ("100K") or have a number like "1003F". This number is a code. The first three numbers are the first three digits of resistance., and the fourth represents the multiplier or how many zero's to add. In some cases, 5% resistors may be supplied in place of the 10% value as shown on the parts list. This is a valid substitution.

2. CAPACITORS Disc capacitors can have a number from 5 to 820, if the value is in picofarads (pf's). Numbers from .001 up to .5 indicate microfarads (mf).NOTE: 1000pf=.00lmf.
Other capacitors, such as mylar, paper, or tantalum, have the value in microfarads. The value may normally differ by 10% without affecting the circuit. For example, although the parts list says "33pf", we may supply a 30 pf disc capacitor. Or a .5mf capacitor may replace one with a value of .47. Also, the tolerance may be lower than in the parts list, or the voltage rating higher, neither of which would affect the results.